Preparation unit——Accessories

AITTAL

GV Series soft-start valve

Specification

Model	GV200-06	GV200-08	GV300-08	GV300-10	GV300-15	GV400-10	GV400-15
Fluid		Air					
Port size	1/8"	1/4"	1/4"	3/8"	1/2"	3/8"	1/2"
Pressure range			0.25	-0.9MPa(35~13	Opsi)		
Proof pressure				1.5MPa(215psi)		
Temperature range				−20~70°C			
Acting type			;	Solenoid contro	l		
Exhaust port size	1/	4"		3/8"		1/	2"
Power connection			Ter	minal、Gromm	ent		
Standard voltage			AC220V, 110V,	24V(50\60Hz);	DC12V, 24V		
Voltage range				-15%~+10%			
Insulation				Class B			
Power consumption		AC: 3.5VA; DC: 2.5W					
Option pressure gauge		F: S	quare pressure	gauge; C: Circ	ular pressure ga	auge	
Suitable F.R.L type	GC200-06	GC200-08	GC300-08	GC300-10	GC300-15	GC400-10	GC400-15






Ordering code

GV300 10 □ F 1 A □ P Thread type Model GV200: 200 Series soft start-up valve P: PT GV300: 300 Series soft start-up valve T: NPT GV400: 400 Series soft start-up valve G: G Electrical entry Port size Model Port size Blank: Terminal 06: 1/8" I: Grommet 200 Series 08: 1/4" Voltage 08: 1/4" A: AC220V(50/60Hz) 300 Series 10: 3/8" B: DC24V 15: 1/2" 10: 3/8" C: AC110V(50/60Hz) 400 Series 15: 1/2" E: AC24V(50/60Hz) F: DC12V Pressure gauge Blank: Pressure gauge Scale N: No pressure gauge 1: MPa 2: psi Pressure gauge shape 3: bar F: Square

Note: When it is used with F.R.L. combination, extra mounting bracket is need. Please refer to P151 for order detail.


C: Circular

Inner structure

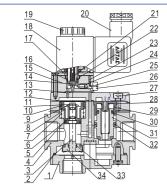


No.	Item	No.	Item	No.	Item
1	Bottom cover	13	Gasket	25	Spring
2	Gasket	14	Gasket	26	Manual override
3	Spool	15	Pilot kit	27	Fixed screw
4	Body	16	spring	28	Spring
5	O-ring	17	Fixed Ipate	29	Valve spool
6	O-ring	18	Coil set	30	O-ring
7	Spring	19	Nut	31	Valve spool
8	Inlet piston	20	Connector	32	O-ring
9	Piston gasket	21	Spring	33	O-ring
10	O-ring	22	O-ring	34	Inlet plug
11	Snap ring	23	Manual override block		
12	Gasket	24	O-ring		

Dimensions

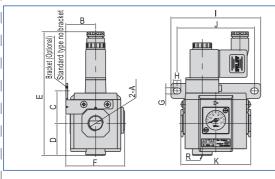

Item\Model	G۷	200	(GV300			400	
iteiiiwodei	06 08		08	10	15	10	15	
A	1/8"	1/4"	1/4"	3/8"	1/2"	3/8"	1/2"	
В	24	1.5		31.5		40.5		
С	30).5		34.5		39		
D E F G	3	0	34			40.5		
E	123.5		131			142.5		
F	5	7	62.2			80		
	5	.5	6.5			8.5		
Н		3	8			11		
	80		95			120		
J	67		82			102		
K	59		74			90		
R	1/	4"	3/8"			1/2"		

Symbol

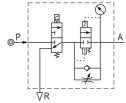


Product feature

Soft start-up valve is used to input compressed air into pneumatic system slowly and has the effect of safety and protection. Air intake is connected with the input P of Soft start-up valve. If coil is energized, the 3/2 way valve opens. At this time, a little air comes to output A through throttle valve, which increases the pressure of the system gradually; when the output pressure is equal the half of the input pressure, Soft start-upvalve completely opens and the flow at this time reaches the highest value of itself. When the coil is de-energized, air intake P closes, the air returns to R orifice through reflux valve and is quickly exhausted. The pressure of the system falls to zero, which protects the whole system.

Attention

Manually adjust the "+" and "-"throttle screw at the bottom of the soft start-up valve as per the requirement of start speed. It shall go slowly, other wise sudden acting of the product or system shall be caused with a heavy impact.

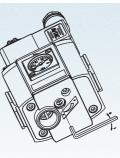

GZ Series safe on-off valve



Specification

Model	GZ200-06	GZ200-08	GZ300-08	GZ300-10	GZ300-15	GZ400-10	GZ400-15
Fluid				Air			
Port size	1/8"	1/4"	1/4"	3/8"	1/2"	3/8"	1/2"
Exhaust port size	1/	1/4" 3/8"					2"
Acting type		Manu					
Valve type			I	3 port 2 way			
Pressure range			ρ~	0.9MPa(0~130)	osi)		
Proof pressure			1	1.5MPa(215psi)		
Temperature range							
Operation angle		90°					
Suitable F.R.L type	GC200-06	GC200-08	GC300-08	GC300-10	GC300-15	GC400-10	GC400-15


Ordering code

■ Symbol



Product feature

- 1. It is module design and can be used with G series F.R.L. combination by bracket.
- 2. This valve can be used as manual 3/2 way valve.
- 3. Visual indication marked EXH/SUP.
- 4. This valve meets the standard on installation conducted by operator specified by OSHA (Occupational Safety & Health Administration). When the machinery is maintained and serviced, the purge valve (Safe on-off valve) for remaining pressure shall be

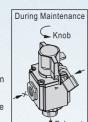

used to eliminate the remaining pressure when the air source is cut off. Valve must be locked to prevent accidental operation by a third party during maintenance. This prevents accidental system pressurization & cylinder actuation which can result in injuries to the machine operator.

GZ300 10 P

Model


GZ200: 200 Series soft on-off valve
GZ300: 300 Series soft on-off valve
GZ400: 400 Series soft on-off valve

P: PT T: NPT G: G

Port size
06: 1/8"
08: 1/4"
08: 1/4"
10: 3/8"
15: 1/2"
10: 3/8"
15: 1/2"


 $Note: When \ it \ is \ used \ with \ F.R.L. \ combination, \ extra \ mounting \ bracket \ needed. \ Please \ refer \ to \ P151 \ for \ order \ detail.$


Inner structure

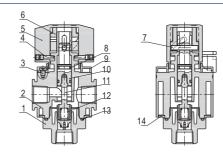

No.	Item	No.	Item
1	Valve cap	8	O-ring
2	Body	9	Cover
3	Screw	10	Spool
4	Operating screw	11	Plug
5	Adjusting screw	12	Spring
6	Special screw	13	O-ring
7	Fixing plate	14	Cover

Dimensions

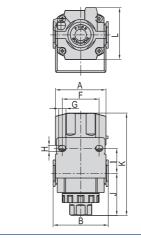

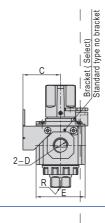

Item\Model	GΖ	200	(3Z30	0	GZ400		
rtemiwouer	06	08	08	10	15	10	15	
Α	4	2		55		6	5	
B C D E	4	7		60		7	5	
С	3	0		41		5	0	
D	1/8"	1/4"	1/4"	3/8"	1/2"	3/8"	1/2"	
E	4	0	53.5			64		
F	27		40			55		
G	8	.5	8			11		
Н	5	.5	6.5			8.5		
I	2	3	27			33.5		
J	36	3.5	46		58.5			
J K L	8	89		112.5			134	
L	42	42.5		56.5			66	
R	1/4"		3/8"			1/2"		

150

Preparation unit——Accessories GA series of gas-distribution block

AITTAL

Specification

Model	GA200-06	GA200-08	GA300-08	GA300-10	GA400-10	GA400-15	GA600-20	GA600-25
Fluid				Α	ir			
Port size	1/8"	1/4"	1/4"	3/8"	3/8"	1/2"	3/4"	1"
Way number				Fo	ur			
Pressure range				0~0.9MPa	(0~130psi)			
Proof pressure		1.5MPa(215psi)						
Temperature range				-20~	·70°C			

Thread, NPT thread and G thread are available.

Ordering code

GA200 08 P


Model GA200: 200 Series gas-distribution block GA300: 300 Series gas-distribution block GA400: 400 Series gas-distribution block GA600: 600 Series gas-distribution block



Port size	
Model	Port size
200 Series	06: 1/8"
200 Series	08: 1/4"
	08: 1/4"
300 Series	10: 3/8"
	15: 1/2"
400 Series	10: 3/8"
400 Series	15: 1/2"
600 Series	20: 3/4"
oud Selles	25: 1"

Note: When it is used with F.R.L. combination, extra mounting bracket is need. Please refer to below for order detail.

Dimensions

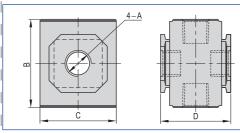


Model\Ite	Model\Item		В	С	D
GA200	06	1/8"	36	30	28.5
GAZUU	08	1/4"	36	30	28.5
GA300	08	1/4"	44	38	35
GASUU	10	3/8"	44	38	35
GA400	10	3/8"	52	52	42
GA400	15	1/2"	52	52	42
GA600	20	3/4"	76	68	60
GAUUU	25	1"	76	68	60


Joint accessories--Bracket


How to select the bracket

I						
Bracket name	Code	Photo	Photo Adapt accessories model			odel
	GA200T-P1		1	GV200	GZ200	GA200
T shape bracket	GA300T-P1			GV300	GZ300	GA300
i i sliape bracket	GA400T-P1		100	GV400	GZ400	GA400
	GA600T-P1	1	1	-	-	GA600
	GA200L-P1			GV200	GZ200	GA200
L shape bracket	GA300L-P1	90	90	GV300	GZ300	GA300
L Silape blacket	GA400L-P1			GV300	GZ400	GA400
	GA600L-P1	1	1	_	-	GA600
	GA200U-P1		70.0	GV200	GZ200	GA200
U shape bracket	GA300U-P1			GV300	GZ300	GA300
O Sliape bracket	GA400U-P1			GV400	GZ400	GA400
	GA600U-P1	- Harrison	The second	_	_	GA600

■ How to use the bracket

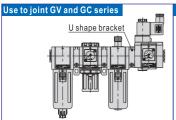

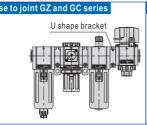

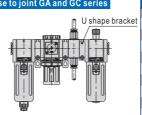


Product feature

1. It is installed between G series regulator (or filter & regulator) and G series Lubricator. The air flow is divided by the device that one enters Lubricator to supply oil for lubrication and the other (the second way) directly enters the equipment.

2. Several kinds of bracket can be selected to connect regulator and lubricator. Optional brackets are type T, $type\ L\ and\ type\ U.$

■ Inner structure

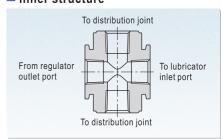



151

GA

· -	Memo	AITAC
	Note	i
.)		
GA		
ĺ		
		I
l		
ľ		
I.		
		i I
Į.		
	152	